


11. ACCESSORI

11. ACCESSORIES

Albero


Shaft

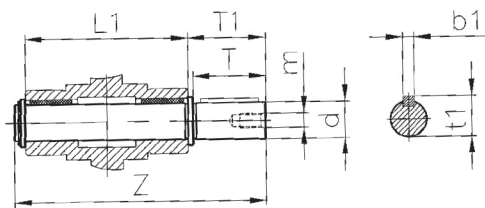

WG	d(h6)	T	T1	L1	Z	Z1	m	b1	t1
030	14	30	32.5	63	102	128	M6	5	16
040	18	40	43	78	128	164	M6	6	20.5
050	25	50	53.5	92	153	199	M10	8	28
063	25	50	53.5	112	173	219	M10	8	28
075	28	60	63.5	120	192	247	M10	8	31
090	35	80	84.5	140	234	309	M12	10	38
110	42	80	84.5	155	249	324	M16	12	45
130	45	80	85	170	265	340	M16	14	48.5


Albero doppio

Double output Shaft

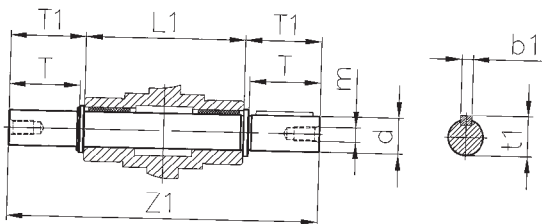

Braccio di reazione


Torque arm

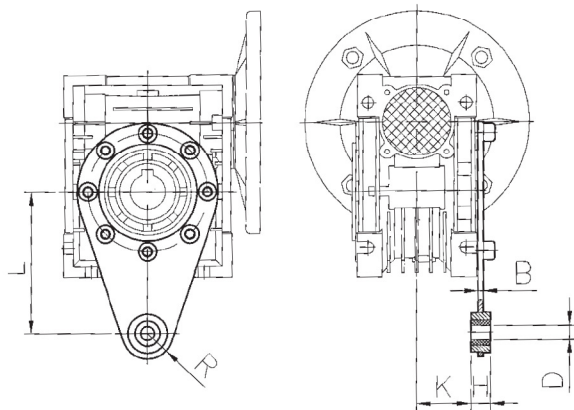

WG	L	H	K	D	R	B
030	85	14	24	8	15	4
040	100	14	31.5	10	18	4
050	100	14	38.5	10	18	4
063	150	14	49	10	18	6
075	200	25	47.5	20	30	6
090	200	25	57.5	20	30	6
110	250	30	62	25	35	6
130	250	30	69	25	35	6

Coprimozzo corona


Cover

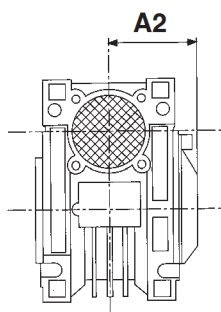

WG	A2
030	42
040	50
050	58
063	69
075	74
090	86
110	94
130	102

Boccole di riduzione

Reduces Sleeves

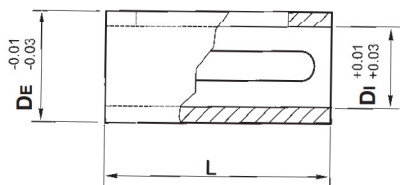

Tipo Type	Dimensioni / Dimensions		
	DE	DI	L
9/11	11	9	22
11/14	14	11	28
14/19	19	14	40
19/24	24	19	50
24/28	28	24	60
28/38	38	28	70
11/19	19	11	35
14/24	24	14	40
19/28	28	19	40
20/20	38	28	50